


Mounting instructions mechanical speedometer

ATTENTION!

Please pay attention to the maximum allowable length of the drive cable square on the speedo input. Enclosed washer is used as mechanical stopper and must be mounted between the drive cable square and the speedometer as shown in the drawing.

If the square is too long the speedometer gets damaged and the warranty is void.

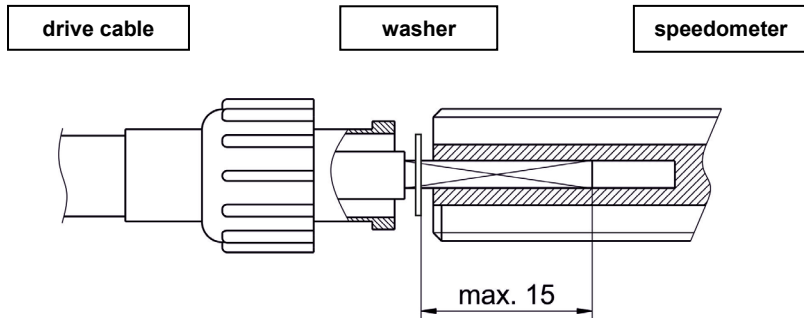

The length of the square above the washer mustn't exceed 15mm and must be shortened and burred if needed. Please note that the cable inside the drive cable may move, for example by the steering angle. Fix the lock nut hand-tight.

MMB Instrumente
SKS Holding GmbH
Wiesenstr. 2
D-09380 Thalheim

+49 3721 2698 - 967 +49 3721 2698 - 968

+49 176 4666 1018 +49 176 4666 1019

info@mmb-instrumente.de

www.mmb-instrumente.de